
#### **On-site Wastewater Management Training Course**

## Failing Systems; **Tracers and Source Tracking**

Honorary Associate Professor Phillip Geary School of Environmental & Life Sciences The University of Newcastle NSW

Centre for Environmental Training

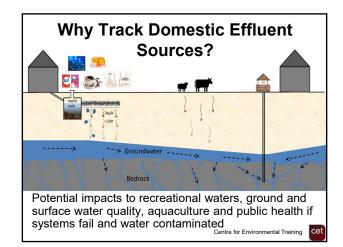

#### **System Performance**

· Research over the last 30 years suggests that many on-site wastewater systems perform poorly and may fail periodically



· Failure is when the system does not achieve the performance expected (based on its specifications) and an unacceptable level of contaminants is released via groundwater or surface pathways to receiving waters

Centre for Environmental Training CE



### **Failing Systems**


- System failures may be due to:
  - poor installation
  - hydraulic under-design
  - unsuitable soils
  - groundwater contact
  - surface water ingress
- ater and surface water 
  Undersized
- · If large numbers fail at the same time, why are
- Evidence for major off-site impacts is harder and more expensive to obtain at the catchment scale


there not more public health impacts?


Centre for Environmental Training

### **Water Quality Indicators**

- · Many physico/chemical parameters are not definitive of faecal contamination
- · Microorganisms used as indicators are water transmissible pathogens such as coliform bacteria
- · FIB (faecal indicator bacteria) typically used include faecal coliforms, Escherichia coli, Enterococcus spp.






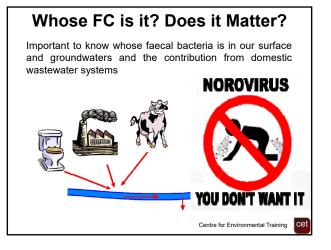




# Optical Brighteners (Fluorescent Whitening Compounds)

- Optical brighteners present in washing powders fluoresce
- Added to adsorb to fabrics and brighten clothing by fluorescing when exposed to ultraviolet light











Centre for Environmental Training

# Possible Interpretation of FC/FWC Results

Faecal bacteria numbers	FWC concentration	Likely cause		
High	High	Failing on-site septic systems o leaking sewer pipe		
High	Low	Waste from human or animal or other warm-blooded animals		
Low	High	Grey water in storm water system		
Low	Low	No evidence of faecal contamination		

Likely cause of faecal contamination when certain numbers of faecal bacteria and levels of FWCs are observed


Centre for Environmental Training


#### **Added Tracers**


- Conservative inorganic compounds can be <u>added</u> e.g. potassium bromide, lithium chloride
- Fluorescent dyes can be <u>added</u> e.g. sodium fluorescein, pyranine, eosin, rhodamine B and WT
- Dyes are of low toxicity, water soluble, easy to detect, readily available and low cost
- Can use visual inspection or instrumental methods such as UV light, fluorimeter or spectrophotometer for determination
- Activated carbon packets for fluorescein can be used for collection







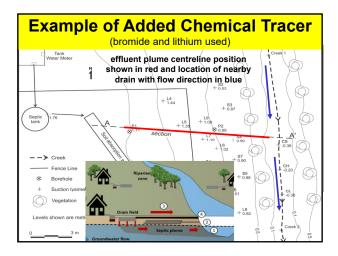


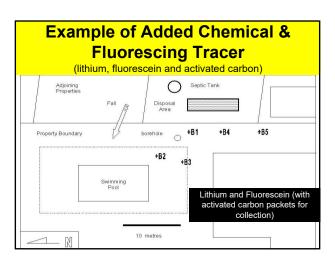

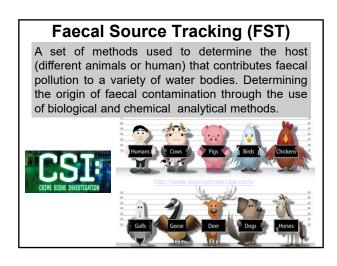

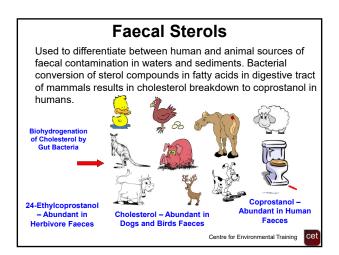

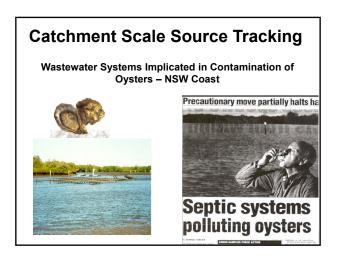

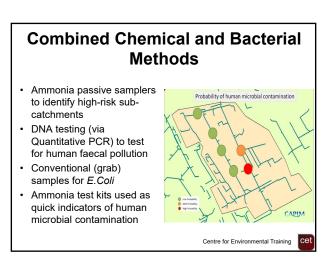

#### Review

- Is there a need to determine if wastewater systems are failing and may be impacting water quality and public health?
- · Is flow likely to be surface or subsurface?
- Is there a need to monitor and obtain quantitative evidence of failure?
- Choice of tracer will depend upon whether the application proposed is at the individual lot or catchment scale
- Need to consider cost and likely outcomes which will depend on tracer properties, its behaviour and scale of application

Remember: the greener grass on the other side of the fence is not always better.....it may be due to a septic tank issue!

Centre for Environmental Training